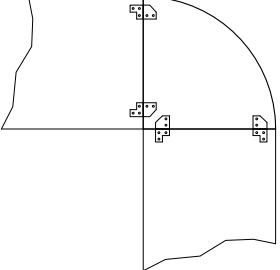
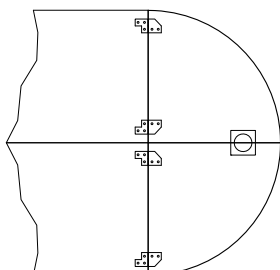
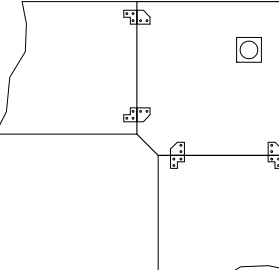
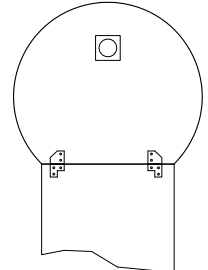
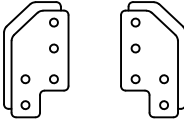
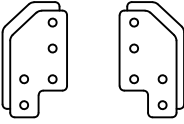
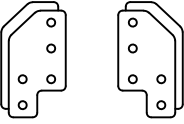
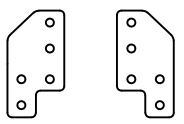




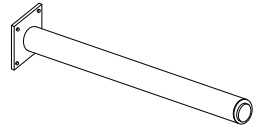
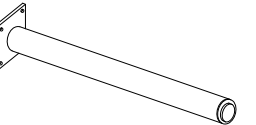





Assembly instruction : Cornerlink , deskend extension

<p>Eckwinkel 90/ 91</p> 	<p>Ansattztisch LA160</p> 	<p>Trapezplatte 12</p> 	<p>Ansattztisch 60/80 (Deskend extension)</p> 
<p>4 x (A)</p>  <p>187772</p>	<p>4 x (A)</p>  <p>187772</p>	<p>4 x (A)</p>  <p>187772</p>	<p>2 x (A)</p>  <p>187772</p>
<p>20 x (B)</p>  <p>500254 (6,3x19)</p>	<p>24 x (B)</p>  <p>500254 (6,3x19)</p>	<p>24 x (B)</p>  <p>500254 (6,3x19)</p>	<p>14 x (B)</p>  <p>500254 (6,3x19)</p>
		<p>1 x (C)</p> 	<p>1 x (C)</p> 
<p>1x (E) 1x (F)</p>  <p>(5,0x30) 508262 Kabelklemme</p>	<p>1x (E) 1x (F)</p>  <p>(5,0x30) 508262 Kabelklemme</p>	<p>2x (E) 2x (F)</p>  <p>(5,0x30) 508262 Kabelklemme</p>	

Detail:

